


# Handshower Slider Adjustments

## Installation Guide

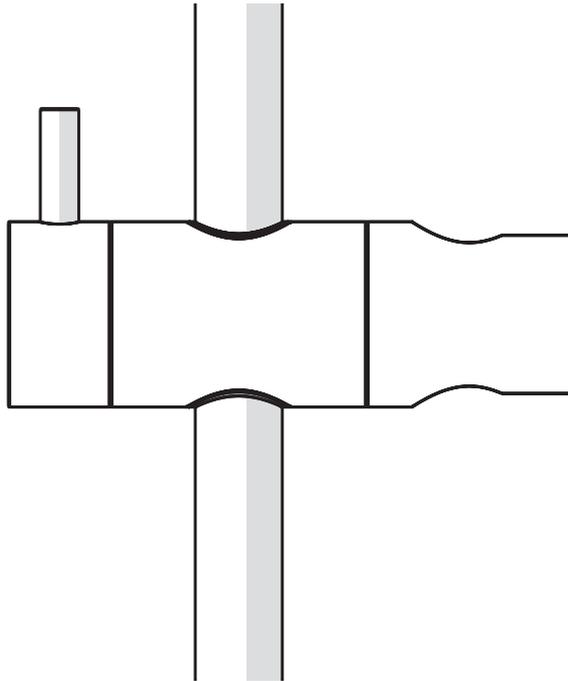

P A R  
TAPS



[www.partaps.com](http://www.partaps.com)




[/ParTapsPtyLtd](https://www.facebook.com/ParTapsPtyLtd)




[@par\\_taps](https://www.instagram.com/par_taps)

# Handshowers on Wall Bracket


For Burj, Oracle, Lugano

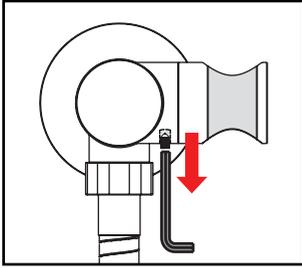

1. Loosen the grub screw inside the slider with an Allen Key

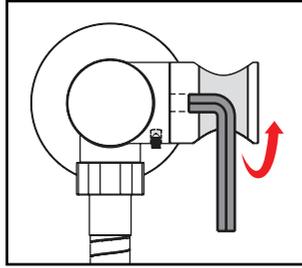

2. Tighten the screw inside the slider

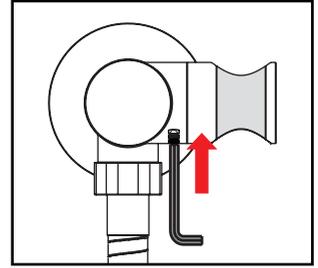

3. Retighten the grub screw until firm fit


## Product Depictions in this Guide

For illustrative purposes, Lugano products have been featured in this guide.


There will be variations in appearance between this guide and products ranges, but installation remains identical.

# Handshowers on Rail


For Tudor & Bell

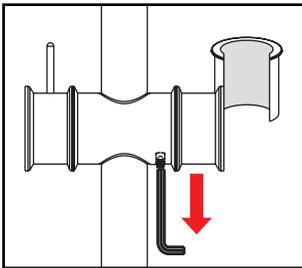

1. Loosen the grub screw inside the slider with an Allen Key

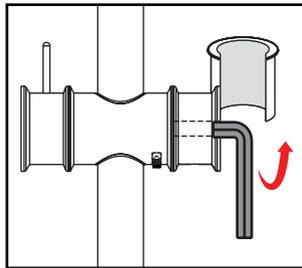

2. Tighten the screw inside the slider

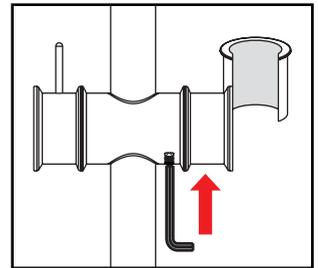

3. Retighten the grub screw until firm fit


## Product Depictions in this Guide

For illustrative purposes, Tudor products have been featured in this guide.


There will be variations in appearance between this guide and products ranges, but installation remains identical.

# Wall Shower Divetor High Rise


## For Lugano

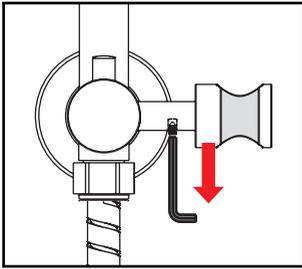

1. Loosen the grub screw inside the slider with an Allen Key

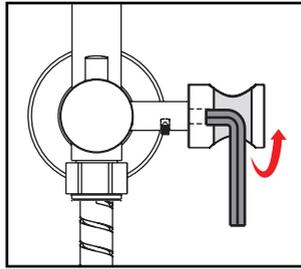

2. Tighten the screw inside the slider

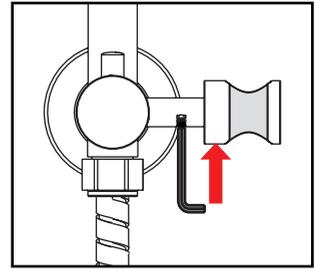


3. Retighten the grub screw until firm fit

---

# Handshowers on Rail

## For Burj, Oracle, Lugano

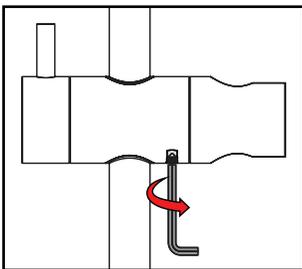

1. Retighten the grub screw inside the slider

### Product Depictions in this Guide

For illustrative purposes, Lugano products have been featured in this guide.

There will be variations in appearance between this guide and products ranges, but installation remains identical.



P A R  
TAPS