
High Rise Dual Shower with Divertor

Installation Guide

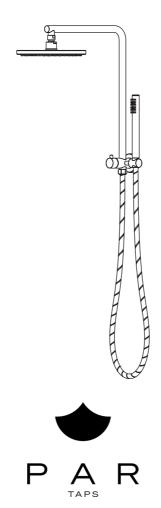







Important Information



Prior to Installation:


- Please read these instructions completely.
- All instructions serve as a guide only and must be installed by a licensed plumber in accordance with AS/NZS 3500.1. Installation carried out by unlicensed individuals will void all warranties.
- Supply lines must be flushed prior to installation to remove any foreign matter.
- All products are suitable for use with most instantaneous hot water heaters, however are not
 compatible with gravity-fed water systems.
- Please check all measurements prior to drilling holes in

Water Pressure & Temperature:

Note: In areas where the recommended maximum water pressure is exceeded, pressure-limiting valves must be installed.


Parts List


- 1 Shower Arm
- 2 Shower Rose
- Divertor Body and Bracket
- 4 Handpiece
- 5 Hose

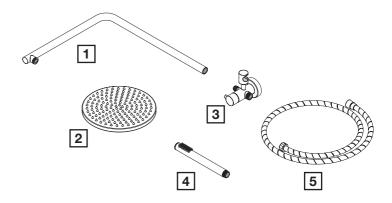


Installation


- Using a spanner, screw the push-fit connector to the 1/2 inch thread
- Push the Divertor Body and Bracket (3) onto the connection and tighten both grub screw on top and below the body

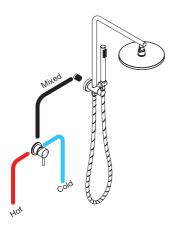


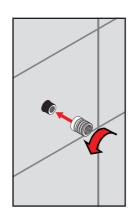

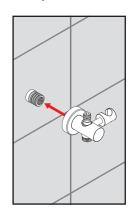

- Insert the Shower Arm
 (1) onto the nipples of the Divertor Body (3).
 - Tighten the grub screw to secure the arm to the nipples







Place the Handpiece (4) on the holder

