




P A R
TAPS

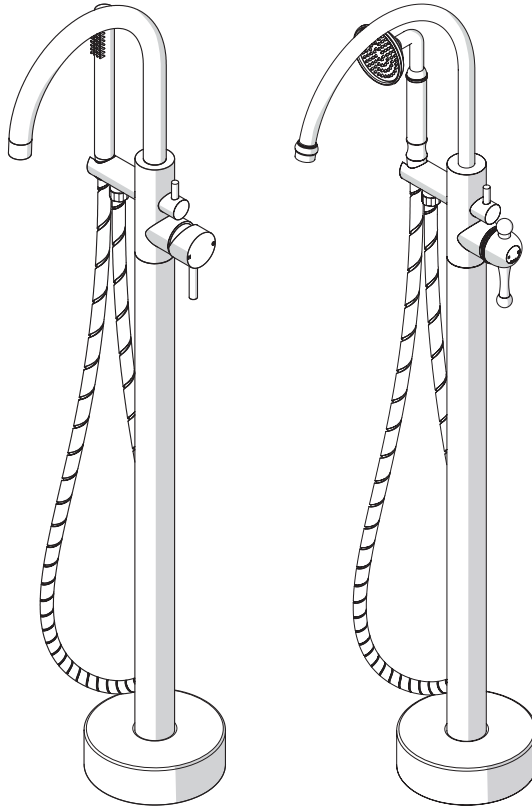


Lugano & Tudor Floor Bath Filler Mixer with Handshower

Installation Guide

Ver 26.2

Important Information

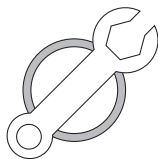

Prior to Installation:

- Please read these instructions completely.
- All instructions serve as a guide only and must be installed by a licensed plumber in accordance with AS/NZS 3500.1. Installation carried out by unlicensed individuals will void all warranties.
- Supply lines must be flushed prior to installation to remove any foreign matter.
- All products are suitable for use with most instantaneous hot water heaters, however are not compatible with gravity-fed water systems.

Water Pressure & Temperature:


This Par Taps products are to be installed by a Licensed Plumber in accordance with AS/NZS 3500.1

Maximum Water Temperature — — — — — 65° Celsius

Regulatory Maximum Water Pressure — — — — — 500kPa

Note: In areas where the recommended maximum water pressure is exceeded, pressure-limiting valves must be installed.








Main Components

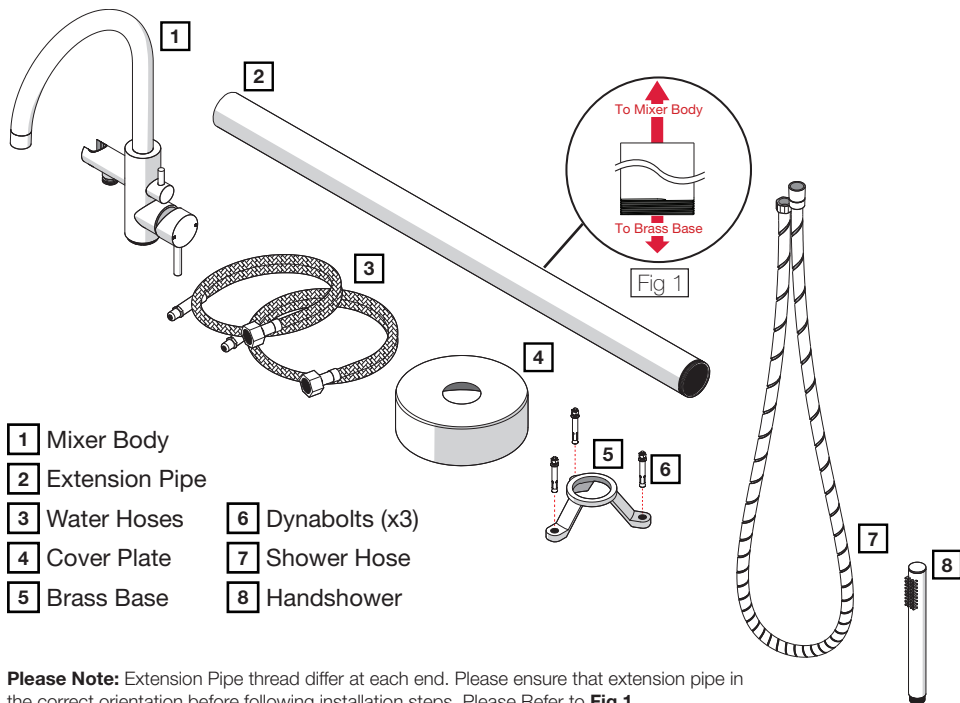

- | | |
|-------------------------|-------------------------|
| 1 Mixer Body | 6 Dynabolts (x3) |
| 2 Extension Pipe | 7 Shower Hose |
| 3 Water Hoses | 8 Handshower |
| 4 Cover Plate | |
| 5 Brass Base | |

Please Note: Extension Pipe thread differ at each end. Please ensure that extension pipe in the correct orientation before following installation steps. Please Refer to **Fig 1**.

Product Depictions in this Guide: For illustrative purposes, Lugano Floor Bath Filler Mixer has been featured in this guide. There will be variations in appearance between this guide and products ranges, but install is the same.

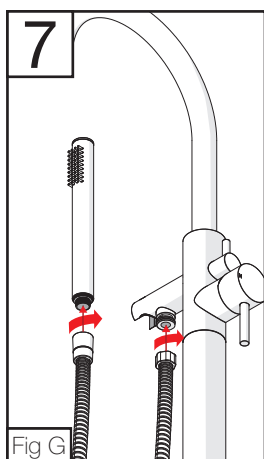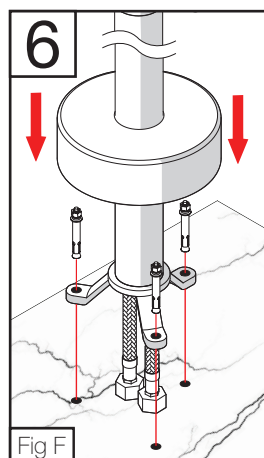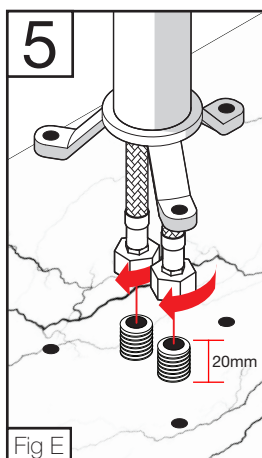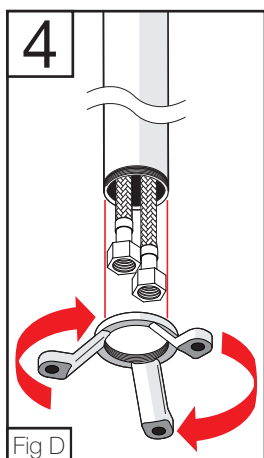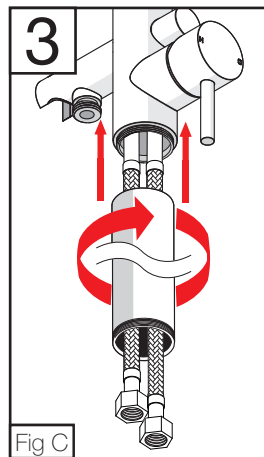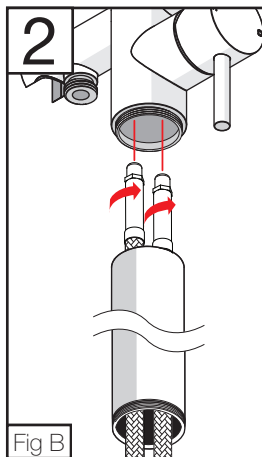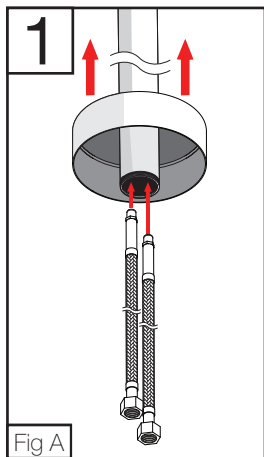

- 1** Slide Cover Plate **(4)** over the Extension Pipe **(2)** then feed both flexible Water Hoses through. **(Fig A)**
- 2** Apply lubricant to the flexible Water Hoses **(3)** o-rings, and install into the underside of the Mixer Body **(1)**. **(Fig B)**
- 3** Screw the Extension Pipe **(2)** into the Mixer Body **(1)**. **(Fig C)**
- 4** Screw the Brass Base **(5)** onto the end of the Extension Pipe **(2)**. **(Fig D)**
- 5** Connect the Hot and Cold Flexible Water Hoses **(3)** into corresponding lines. **(Fig E)**
- 6** Use the Dynabolts provided **(6)** to secure the assembly to the floor surface. **(Fig F)**
- 7** Finish the assembly by screwing the Shower Hose **(7)** to the hose connection of the Mixer Body **(1)** and the Handshower **(8)**. **(Fig G)**



www.partaps.com



[/ParTapsPtyLtd](https://www.facebook.com/ParTapsPtyLtd)



[@par_taps](https://www.instagram.com/par_taps)