PAR
TAPS

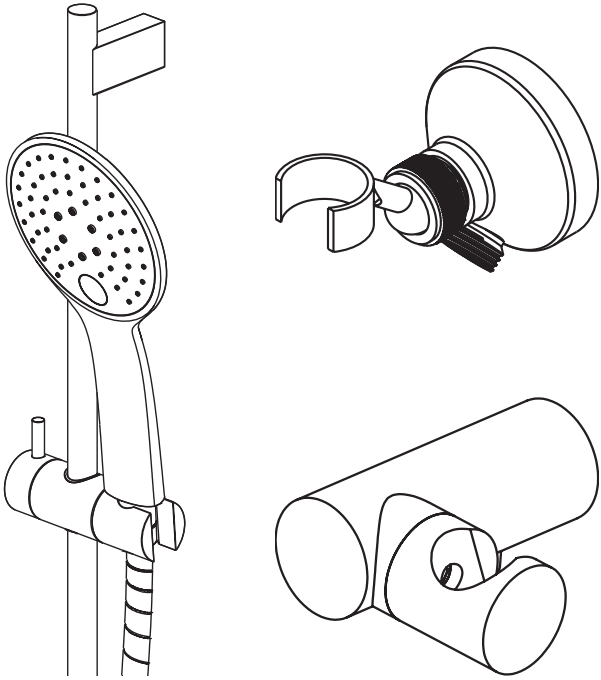

Handshower on Rail & Handshower on Wall Bracket

Installation Guide

Ver 26.3

Important Information

Prior to Installation:

- All instructions serve as a guide only and the shower must be installed by a licenced plumber in accordance with AS/NZS 3500.1. Installation carried out by unlicensed individuals will void all warranties.
- Supply lines must be flushed prior to installation to remove any foreign matter.
- All products are suitable for use with mains pressure and most instantaneous hot water heaters. However, they are not compatible with gravity-fed water heaters, low/unequal pressure networks, instantaneous water heaters and thermostatic mixing valves.
- Where flow controllers are installed, care should be exercised during installation to ensure that male connecting threads do not damage the flow controller
- Please check all measurements prior to installation

Mounting Guide

For Bell and Tudor only

Please Note: If there is no mounting bracket supplied for your accessory, skip to Step 2.

1. If a bracket is supplied, position it on the wall in the desired mounting location, preferably where a wall noggin is located

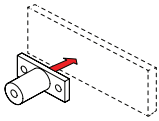

2. Mark the intended mounting points. If a bracket is supplied, do so using the bracket holes as a template. Ensure it is positioned straight and level on the wall.

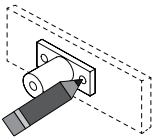

3. Drill the mounting holes to suit the plastic plugs provided

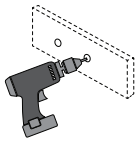

4. Tap the plastic plugs into place and fit the accessory bracket over them through the corresponding holes.

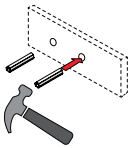

5. Install screws through the plastic plugs into the wall. where appropriate, fit locking rings or collars over the plastic plugs before installing screws. Install and tighten any grub screws supplied.

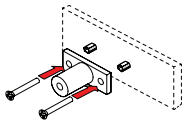

Handshowers

PAR
TAPS

Lugano
Handshower

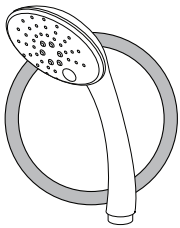

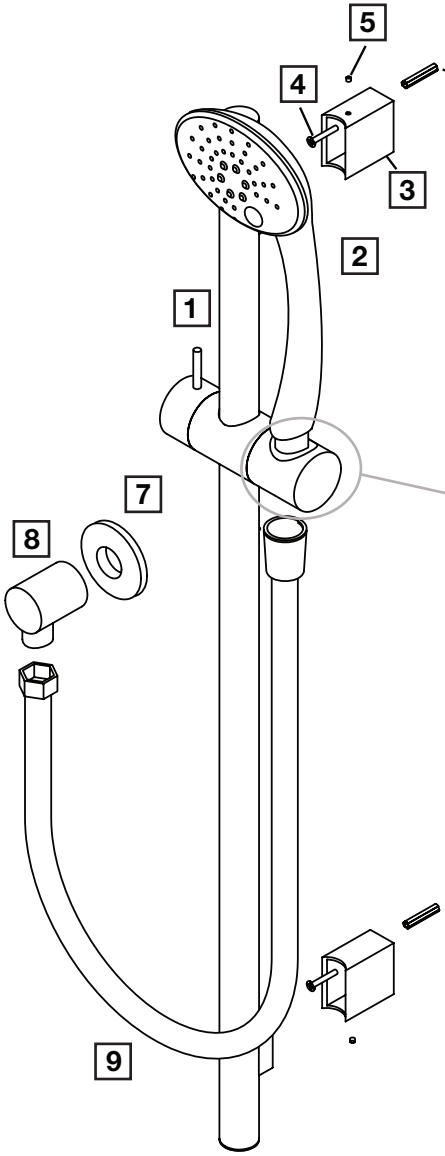

1 Rail
2 Handshower
3 Wall Bracket
4 Wall Screws
5 Grub Screw
6 Wall Plugs
7 Flange
8 Hose Connection
9 Hose

Note: Please ensure that handshower dock opening is on the right hand side of rail

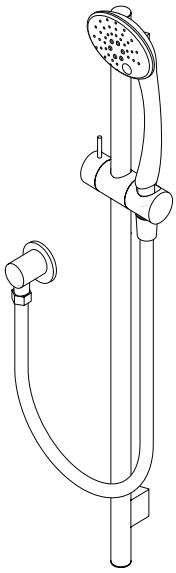

Tudor & Bell

Handshower

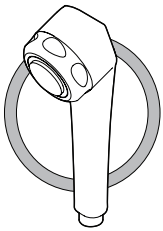

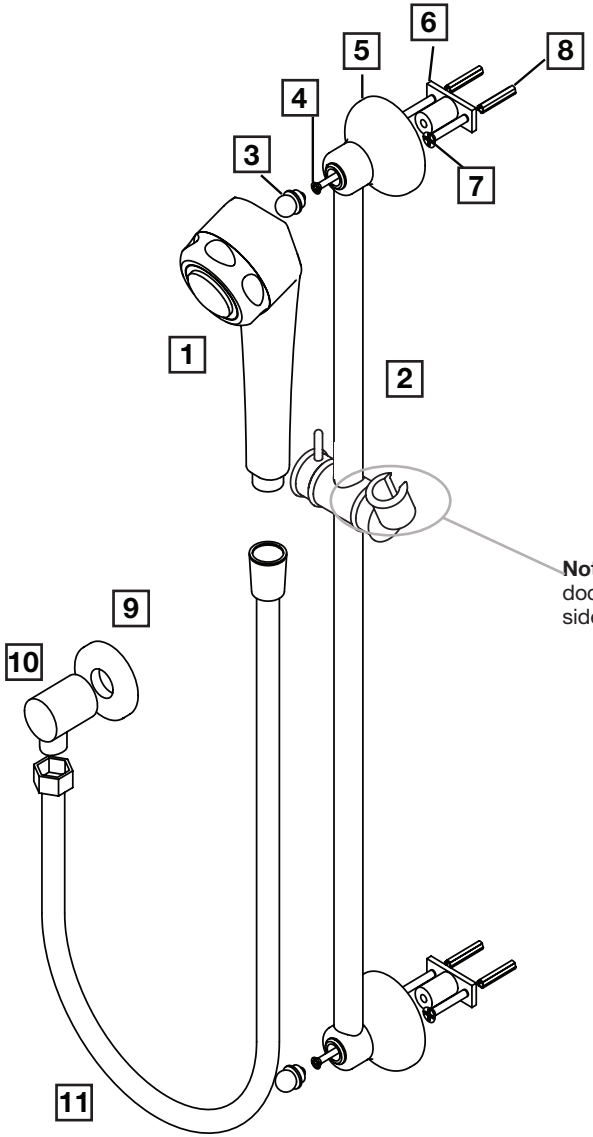

1. Handshower
2. Rail
3. Decorative Nut
4. Rail Screw
5. Wall Flange
6. Wall Bracket
7. Wall Screws
8. Wall Plugs
9. Wall Hose Flange
10. Hose Connection
11. Hose

Note: Please ensure that handshower dock opening is on the right hand side of rail

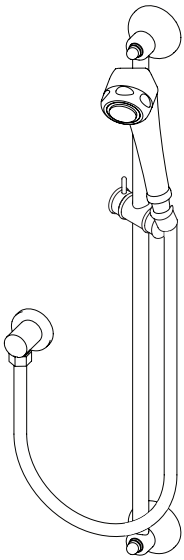

Burj
Handshower

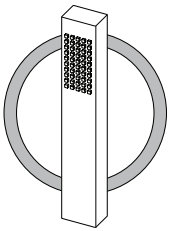

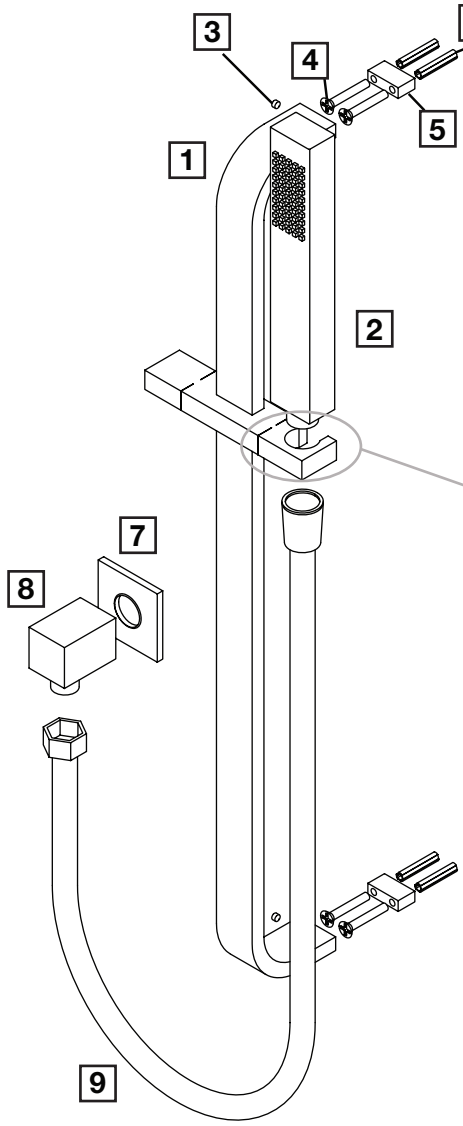

1 Rail
2 Handshower
3 Wall Bracket
4 Wall Screws
5 Grub Screw
6 Wall Plugs
7 Flange
8 Hose Connection
9 Hose

Note: Please ensure that handshower dock opening is on the right hand side of rail

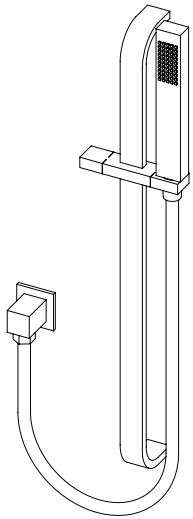

Oracle

Handshower

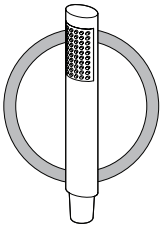

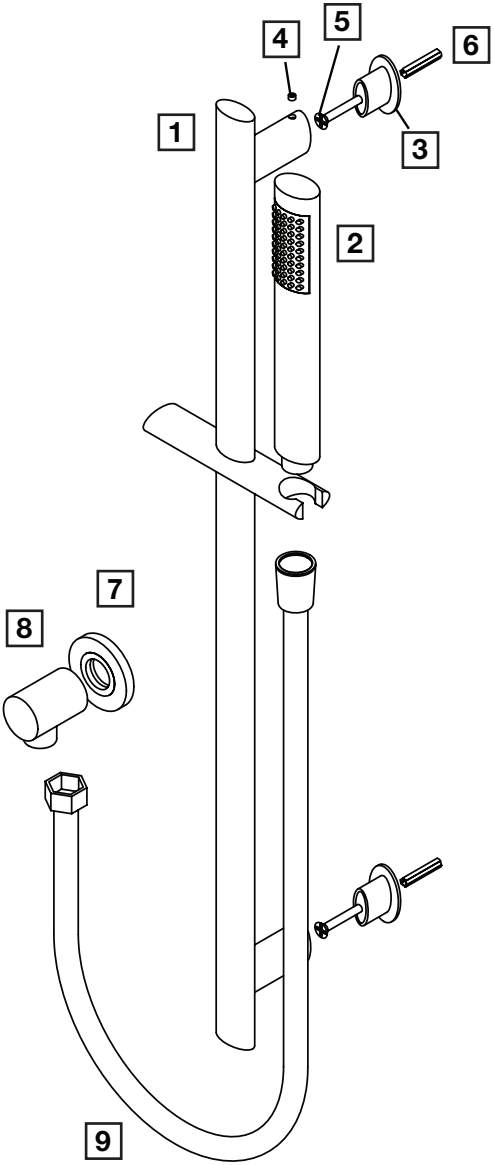

1. Rail
2. Handshower
3. Wall Bracket
4. Wall Screws
5. Grub Screw
6. Wall Plugs
7. Flange
8. Hose Connection
9. Hose

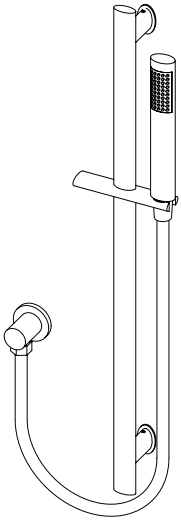

Wall Bracket

PAR
TAPS

Important Information

Prior to Installation:

- All instructions serve as a guide only and the shower must be installed by a licensed plumber in accordance with AS/NZS 3500.1. Installation carried out by unlicensed individuals will void all warranties.
- Supply lines must be flushed prior to installation to remove any foreign matter.
- All products are suitable for use with mains pressure and most instantaneous hot water heaters. However, they are not compatible with gravity-fed water heaters, low/unequal pressure networks, instantaneous water heaters and thermostatic mixing valves.
- Where flow controllers are installed, care should be exercised during installation to ensure that male connecting threads do not damage the flow controller
- Please check all measurements prior to installation

Water Pressure & Temperature:

This Par Taps products are to be installed by a Licensed Plumber in accordance with AS/NZS 3500.1

Maximum Water Temperature — — — — — — — — — — 65° Celsius

Regulatory Maximum Water Pressure — — — — — — — 500kPa

Installation

1. First, remove the old shower components from the female thread in the wall. Ensure the thread has not been damaged and is in good condition.

   To prepare the thread for connection to the wall bracket, apply teflon tape to the 1/2 inch male thread (Fig. AB) in a counter-clockwise direction to ensure a reliable connection. (Fig. A)

   Teflon tape is available from most hardware or plumbing stores.

   1/2 inch male thread is not supplied

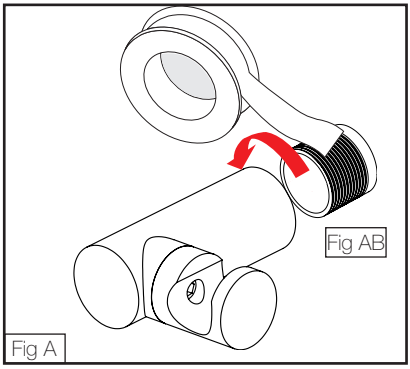

Fig A

2. Screw the wall bracket onto the female thread in the wall in a clockwise direction. (Fig. B)
Use the water hose connection on the underside of the bracket for leverage to tighten.
Do not tighten using the handshower mount. (Fig. C)
This is true for all brackets with integrated mounts as depicted.

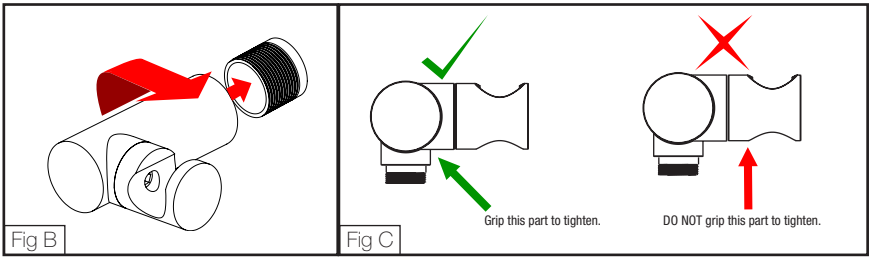

Note: Lugano products have been used for illustrative purposes. Wall Brackets from other ranges follow identical procedures.

3. For handshower brackets from ranges such as Tudor, Vogue and Bell, the water hose connection is still to be used for tightening leverage. (Fig. D)

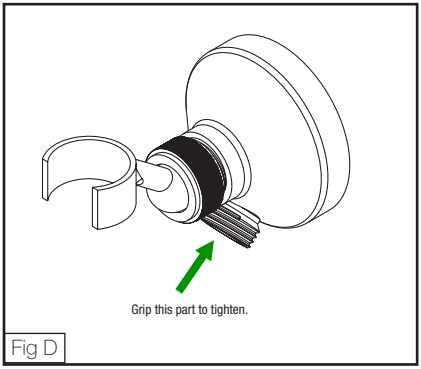

4. Connect the end of the hose to the hose mount on the bracket, ensuring rubber O-ring is placed in the connecting nut as shown. (Fig. E)

Tighten and check for any leaks.

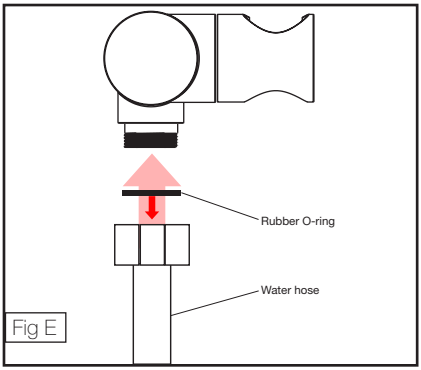

5. Rotate the shower bracket mount so the opening faces the wall as in the image below, and place the shower in the bracket. (Fig. F)

In the case of Tudor, Vogue and Bell handshowers, the opening will always face the front.

Installation Complete.

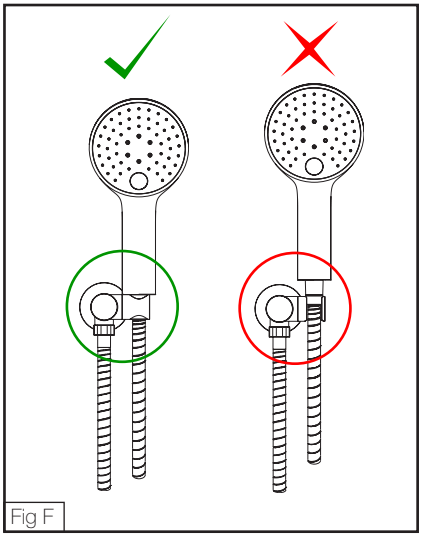

Fig F

PAR
TAPS

www.partaps.com

/ParTapsPtyLtd

@par_taps