PAR
TAPS

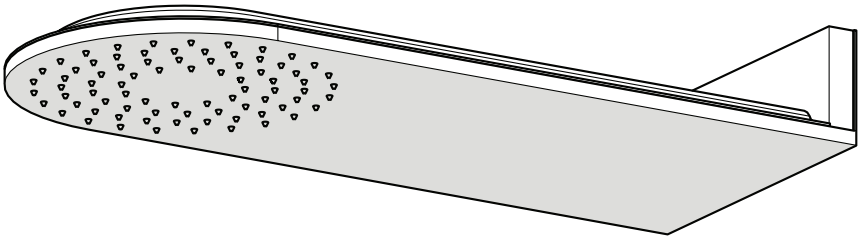

Lava Wall Shower

Installation Guide

Ver 26.3

Important Information

Prior to Installation:

- All instructions serve as a guide only and the shower must be installed by a licensed plumber in accordance with AS/NZS 3500.1. Installation carried out by unlicensed individuals will void all warranties.
- Supply lines must be flushed prior to installation to remove any foreign matter.
- All products are suitable for use with mains pressure and most instantaneous hot water heaters. However, they are not compatible with gravity-fed water heaters, low/unequal pressure networks, instantaneous water heaters and thermostatic mixing valves.
- Where flow controllers are installed, care should be exercised during installation to ensure that male connecting threads do not damage the flow controller
- Please check all measurements prior to installation

Water Pressure & Temperature:

This Par Taps products are to be installed by a Licensed Plumber in accordance with AS/NZS 3500.1

Maximum Water Temperature — — — — — — — — — — 65° Celsius

Regulatory Maximum Water Pressure — — — — — — — 500kPa

Parts List

1. Shower Arm & Rail
2. Shower Rose
3. Wall Flange x2
4. Wall Bracket Mount

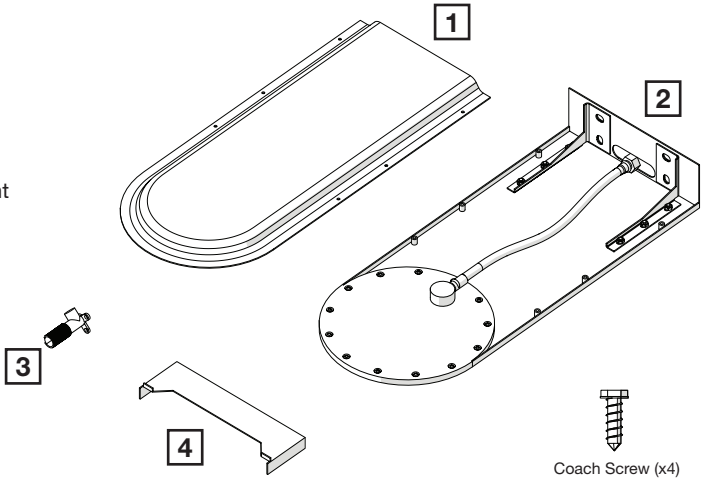

01

Ensure the recess in the wall is of sufficient size to accommodate the shower and that there is a noggin present where it is intended to be mounted

Fig A. Wall structure example

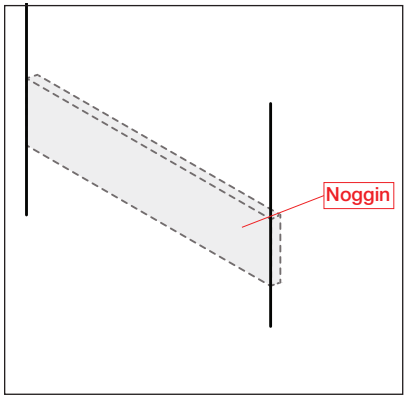

Fig B. Wall recess minimum dimension

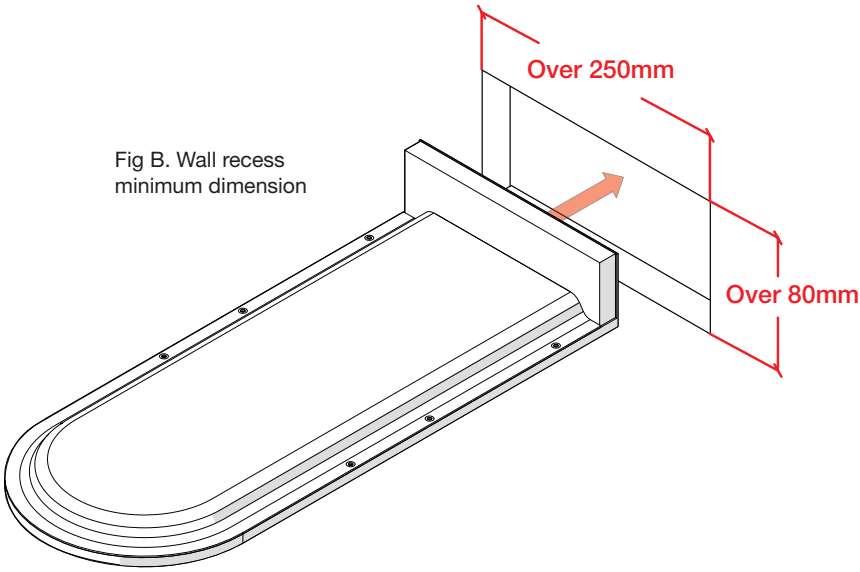

IMPORTANT: When installed, the near face of the shower mounting plate must be level with the face of the finished tiled wall

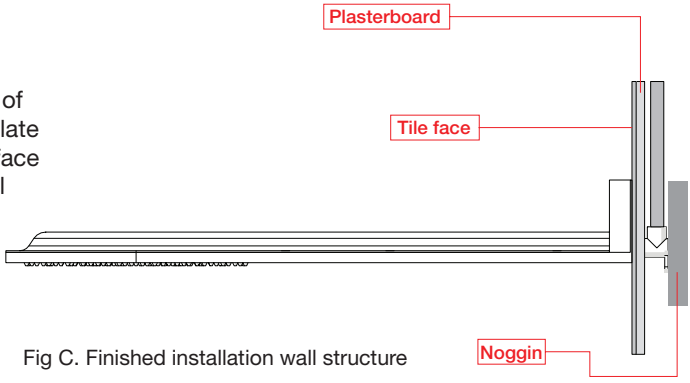

Fig C. Finished installation wall structure

02

Undo the 6 outer screws on the shower head body and remove the main top cover and the rear cover plate

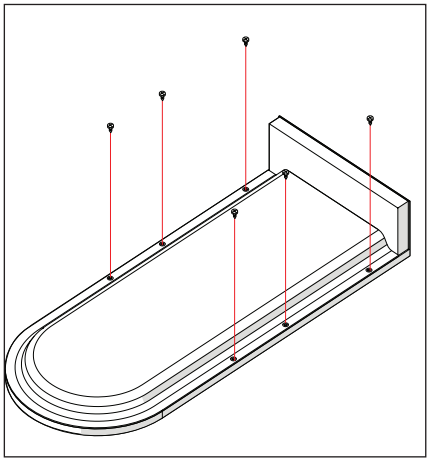

Fig D. Exterior screw removal

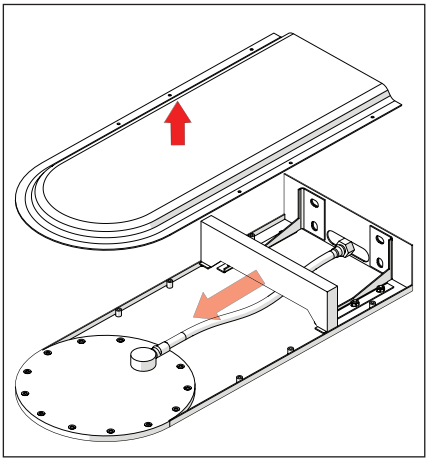

Fig E. Cover plate removal

03

Using the rear plate of the shower head, mark the intended mounting points on the noggin and the location of the wall water outlet. It is recommended that a spirit level be used to ensure level placement

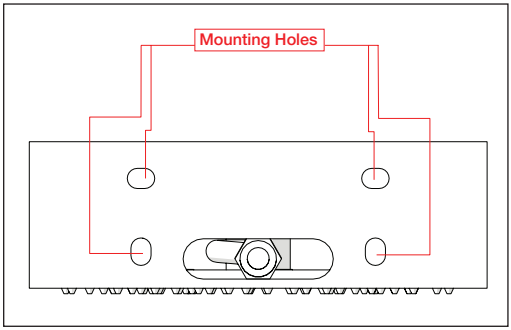

Fig F. Mounting hole indication

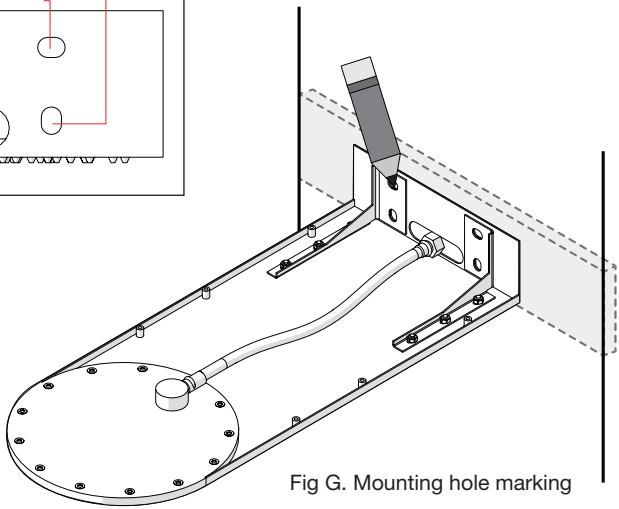

Fig G. Mounting hole marking

04

Install the wall outlet in the appropriate location. The outlet should protrude at least 15mm past the face of the finished tiled wall. This is to ensure the shower water connection has enough thread to connect properly

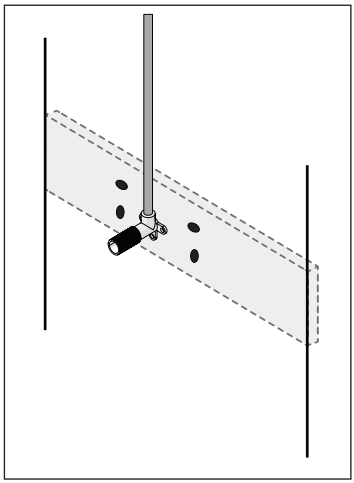

Fig H. Wall outlet example location

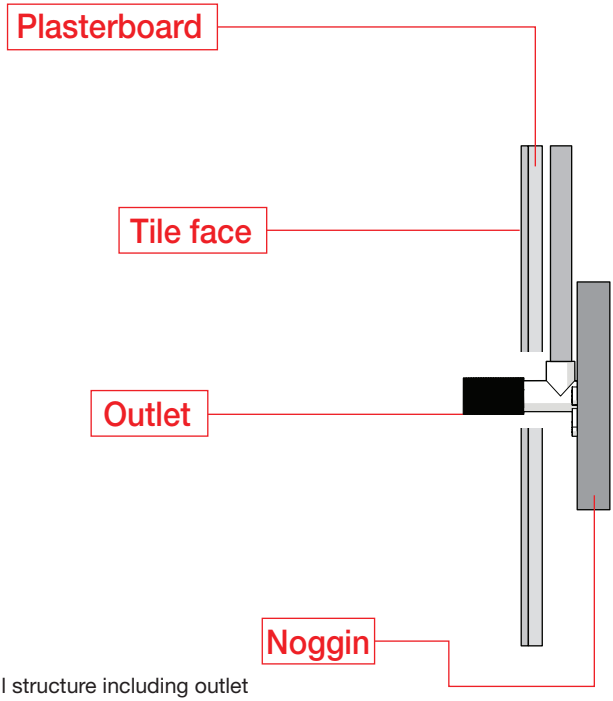

Fig I. Example wall structure including outlet

05

Fit the shower over the wall outlet and mount to the noggin through the previously marked holes.

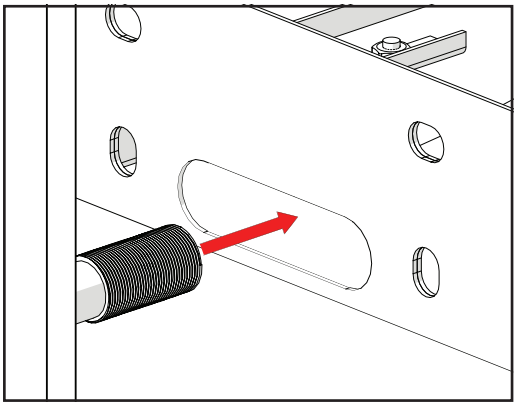

Fig J. Fitting shower body over outlet

IMPORTANT: If mounting to a timber noggin, pilot the previously-marked holes to suit an M8 coach screw.

If mounting to a steel noggin or masonry, ensure that appropriate alternative fasteners are used at installer's discretion

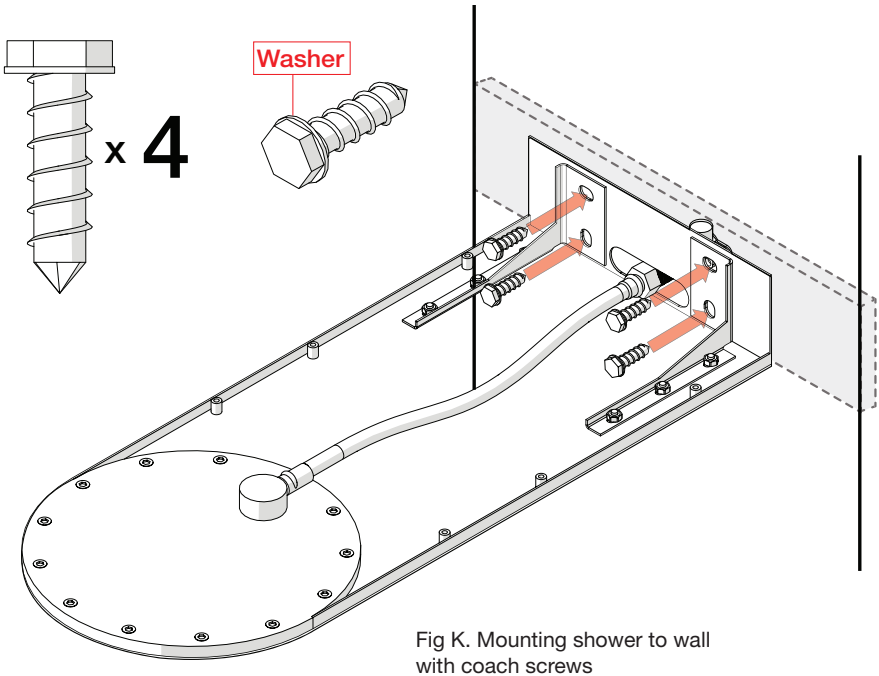

Fig K. Mounting shower to wall with coach screws

06

Ensure that rubber O-ring is present in the water feed tube fastening nut and screw the flexible water feed tube to the outlet. Ensure it is finger-tight but avoid over-tightening

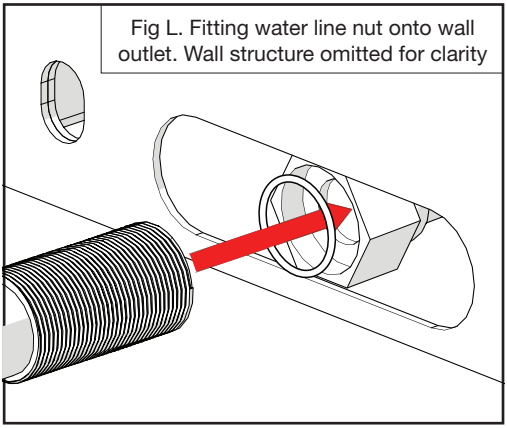

Fig L. Fitting water line nut onto wall outlet. Wall structure omitted for clarity

07

With the shower head mounted to the wall, replace the rear cover plate, the top main cover plate and the six exterior screws

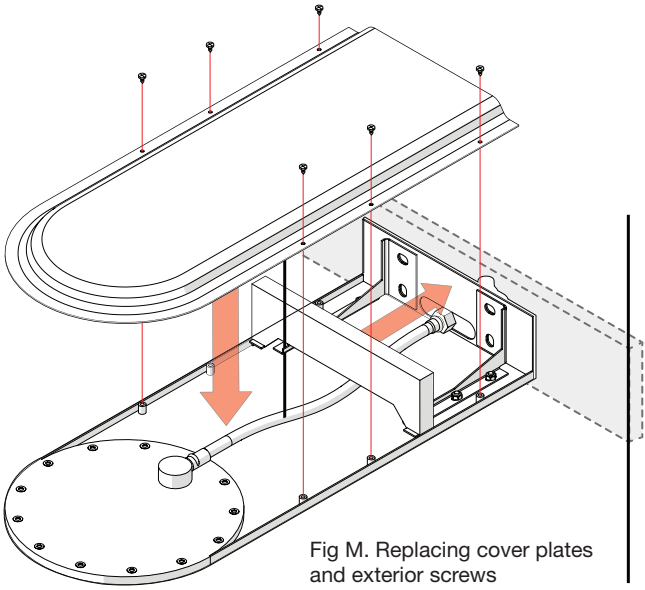

Fig M. Replacing cover plates and exterior screws

Installation Complete!

PAR
TAPS

www.partaps.com

/ParTapsPtyLtd

@par_taps