



P A R
TAPS




Opus Hob Tapware Collection

Installation Guide

Ver 26.2

Important Information

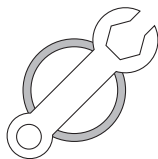

Prior to Installation:

- Please read these instructions completely.
- All instructions serve as a guide only and must be installed by a licensed plumber in accordance with AS/NZS 3500.1. Installation carried out by unlicensed individuals will void all warranties.
- Supply lines must be flushed prior to installation to remove any foreign matter.
- All products are suitable for use with most instantaneous hot water heaters, however are not compatible with gravity-fed water systems.

Water Pressure & Temperature:

This Par Taps products are to be installed by a Licensed Plumber in accordance with AS/NZS 3500.1


Maximum Water Temperature — — — — — 65° Celsius

Regulatory Maximum Water Pressure — — — — — 500kPa




Note: In areas where the recommended maximum water pressure is exceeded, pressure-limiting valves must be installed.

Before Installation

Prior to installation, ensure the finished benchtop thickness is no larger than 30mm

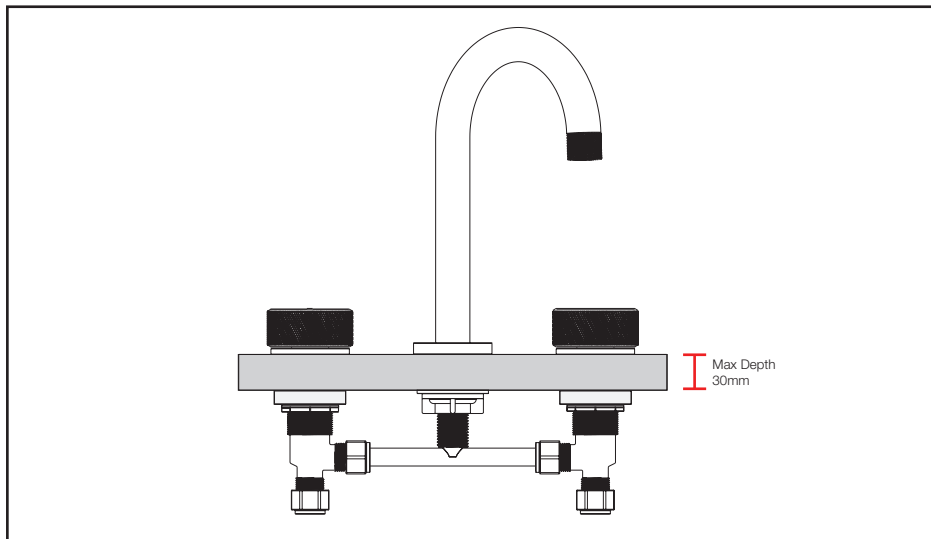

Hole Sizes and Distances

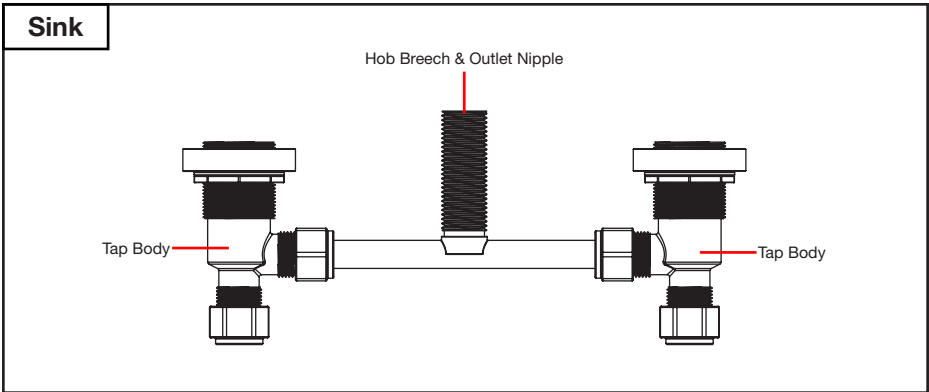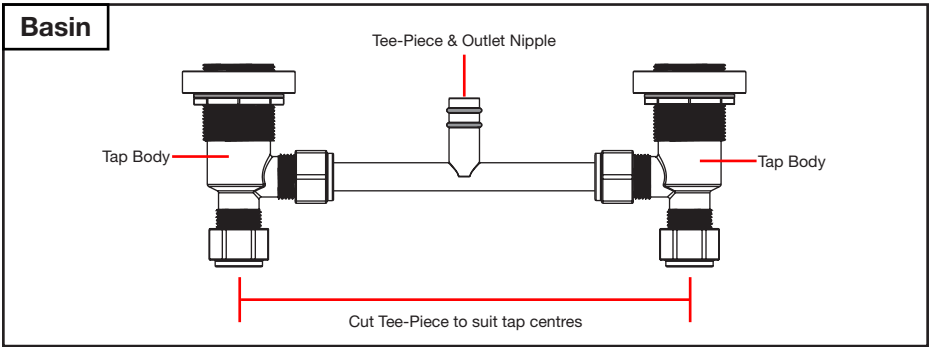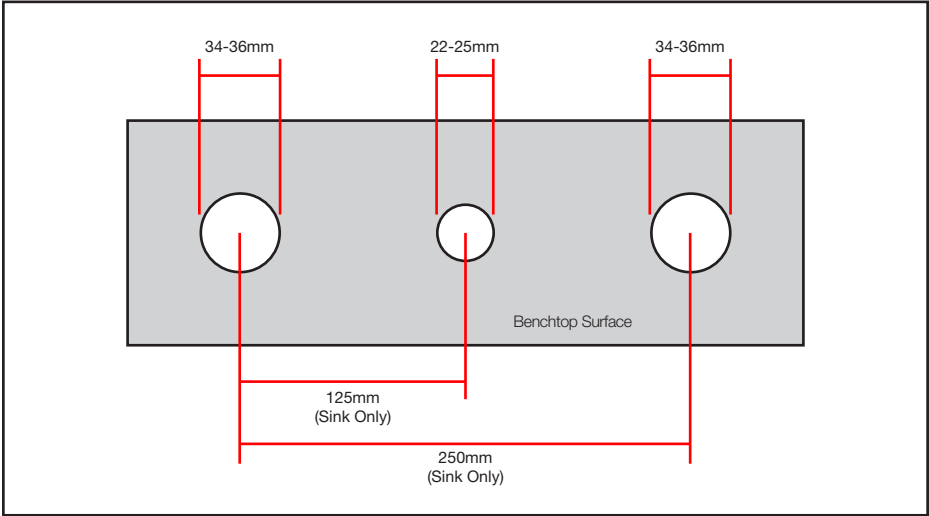


Hob Basin Tapware

1. Important - Flush water lines on new installations before fitment to avoid damage to valve and blocking of filter or aerator


Align the plastic washers below the outlet hole of the benchtop surface (Fig A).

Place the washers at the center hole underneath the benchtop.


Then place the tee-piece underneath the washers (Fig B).

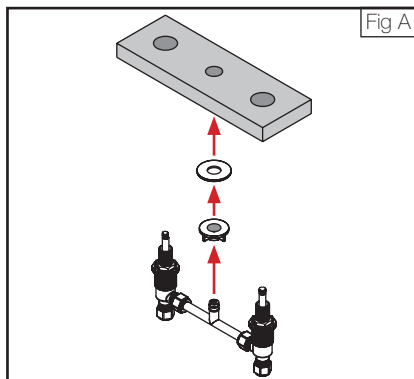

2. Align the plastic washers below the outlet hole of the benchtop surface. Then insert the tee-piece (Fig B).

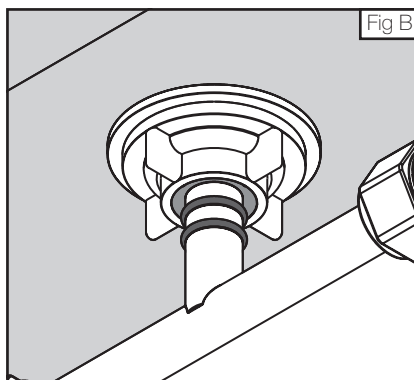

Handle Alignment for Lever Handles

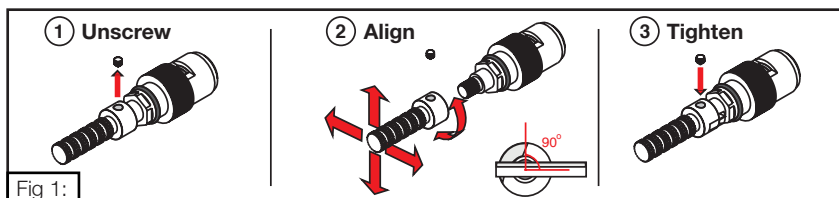

Firstly ensure that the disc is in the closed position and then fit handle to align.

*Fig 1: To align the handle, loosen grub screw from the extension using 2mm Allen key, then rotate the position of the extension and ceramic disc cartridge until the desired handle position is achieved.

3. Remove handles and flanges from the tapware sets


Install centre outlet

Connect the tee-piece to the bodies and tighten the nuts.


Push the assembly into position connecting the tee-piece to the centre outlet

Fit top locknut and washer so that it is flushed on top of the tap body

Fit flange and handle bodies (Fig C).

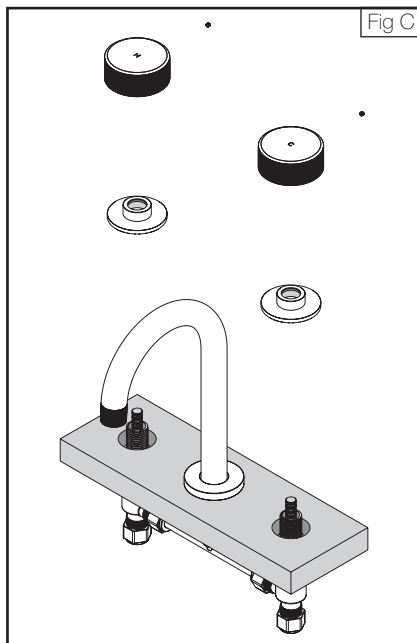

4. Screw and tighten the washers for the centre outlet to complete the assembly (Fig D).

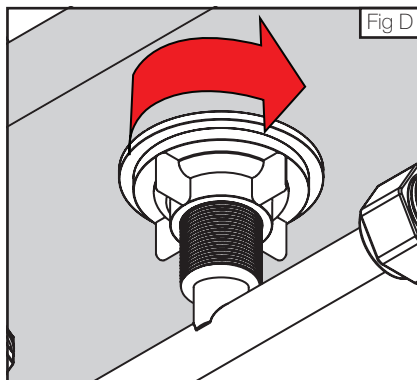


Hob Sink Tapware

1. Important - Flush water lines on new installations before fitment to avoid damage to valve and blocking of filter or aerator

Align the plastic washers below the outlet hole of the benchtop surface (Fig A).

Place the washers at the center hole underneath the benchtop.

Then place the hob breach underneath the washers (Fig B).

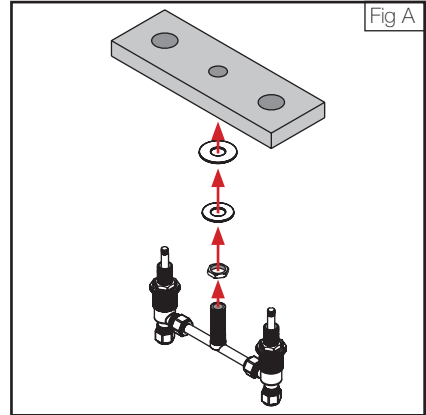


2. All outlets are push-fit
Undo the screw and separate from the base of the spout


Screw the base of the spout onto the male part of the hob breach

Check that the o-rings and clips are aligned with the base of the spout.

Push the spout down onto its base and tighten the screw (Fig B)

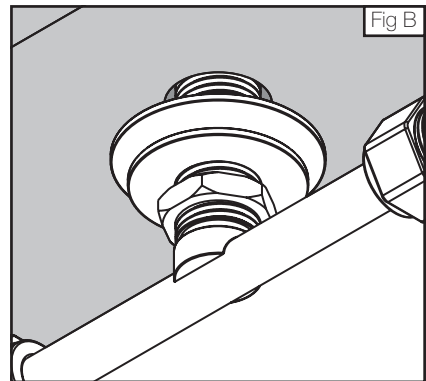

Handle Alignment for Lever Handles

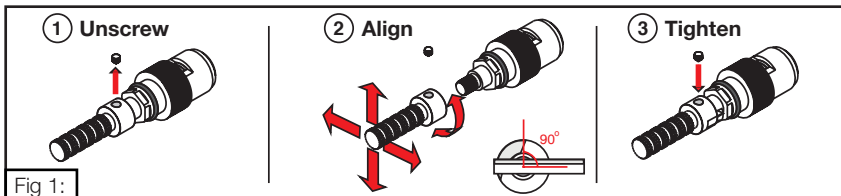

Firstly ensure that the disc is in the closed position and then fit handle to align.

*Fig 1: To align the handle, loosen grub screw from the extension using 2mm Allen key, then rotate the position of the extension and ceramic disc cartridge until the desired handle position is achieved.

3. Remove handles and flanges from the tapware sets


Install centre outlet

Connect the hob breech to the bodies and tighten the nuts.


Push the assembly into position connecting the hob breech to the centre outlet

Fit top locknut and washer so that it is flushed on top of the tap body

Fit flange and handle bodies (Fig C).

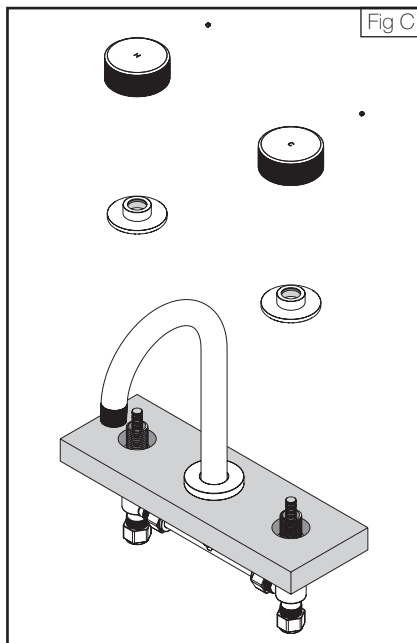

4. Screw and tighten the washers and nut for the centre outlet to complete the assembly (Fig D).

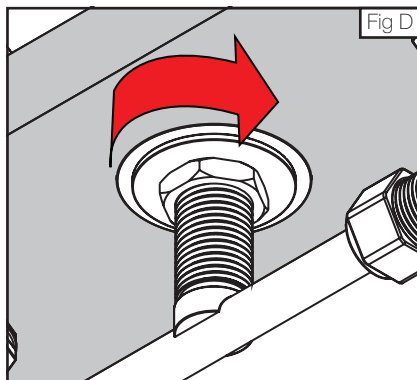



www.partaps.com



[/ParTapsPtyLtd](https://www.facebook.com/ParTapsPtyLtd)



[@par_taps](https://www.instagram.com/par_taps)