


Lugano Exposed Wall Shower & Arm - Extendable

Installation Guide



P A R
TAPS

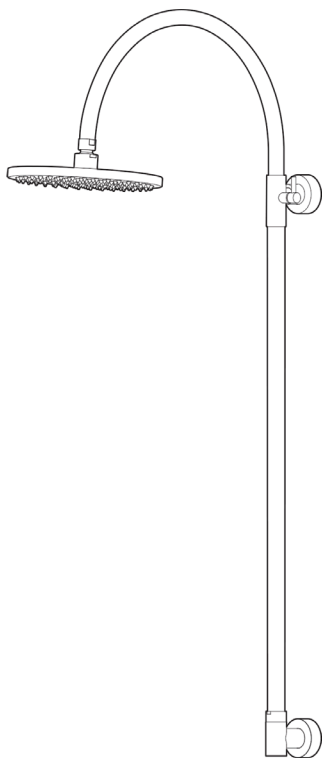

www.partaps.com




[/ParTapsPtyLtd](https://www.facebook.com/ParTapsPtyLtd)




[@par_taps](https://www.instagram.com/par_taps)


Installation

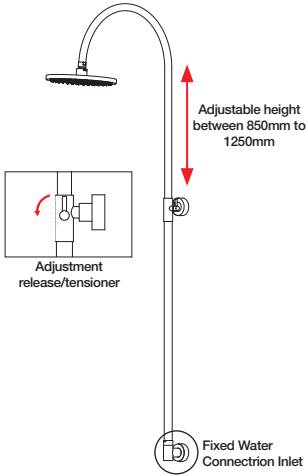


1. Slide the Flange (3) over the Water Connection Elbow (5). Then using a spanner, tighten the connector (5) to the 1/2 inch thread.

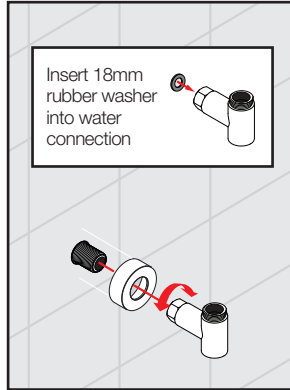


2. Measure 790mm vertically from the 1/2 inch thread. Drill and screw in the Wall Mounting Bracket (4) onto the tiled surface.

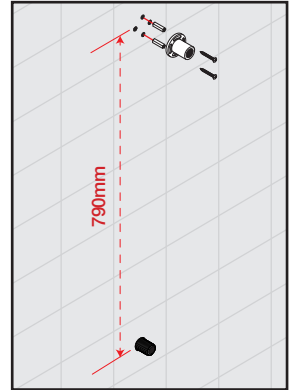


3. Insert a 24mm rubber onto the Water Connection Elbow (5), then screw the Shower Rail and Arm (1) onto the Connection Elbow (5). Tighten with a spanner

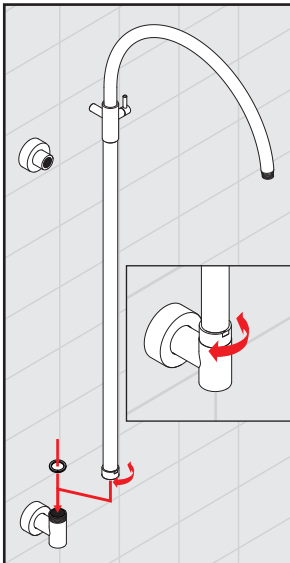

4. Locate the Tensioner pin, pushing the pin into the Wall Bracket Mount (4). Tighten the grub screw to secure.

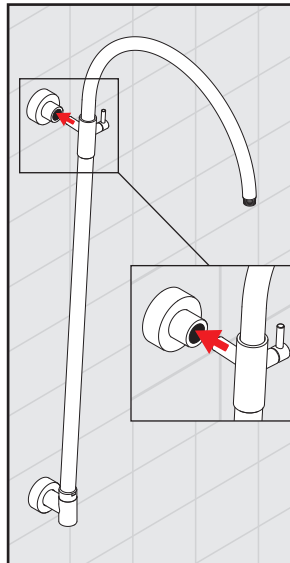

5. Screw the Shower Rose (2) to the Arm (1) and tighten with a spanner. Check operation and test for leaks before use.

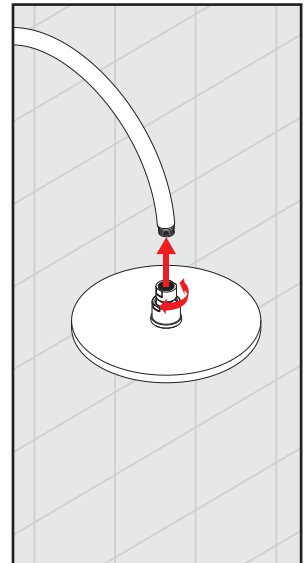



P A R
TAPS